



FORKLIFT

UNIVERSAL BUCKETS

Operator's Manual for Models 1400B series



Model List			
Model	Size	Capacity	Empty Weight
1400B	60"	1.0 cuyd.	600 lbs.
1406B	72"	1.2 cuyd.	670 lbs.
1408B	95"	1.6 cuyd.	760 lbs.
1408BHC	95"	2.0 cuyd.	900 lbs.

BEFORE USE, READ AND UNDERSTAND THE COMPLETE OPERATOR'S MANUAL.

If you need clarification or any additional information call your Star dealer or call Star Industries @ 1-800-541-1797 during normal business hours.

INSTALLATION, USE & SAFETY PRECAUTIONS

Star Industries models 1400B, 1406B, 1408B, and 1408HC Universal Fit (slip-on forks style) buckets are designed for use on extendable reach forklifts (telehandlers). The forklift buckets come equipped with fork pockets that will accept up to 7" wide X 3" thick X 48" long forks. Optional extended fork pockets are available for 60" long forks. Be aware that the information contained in this manual is intended as a guide and does not replace the need for the user to know, understand, and observe all applicable company, local, state, and federal safety codes and or requirements.

DANGER - DO NOT USE WITHOUT INSTALLING RETAINING PINS behind the heel of each fork and securing with hair pins or cotter pins

Safety chain(s) must also be used. Wrap chain around a strong part of the fork carriage and secure with locking grab hook.

BEFORE USE, READ AND UNDERSTAND THE COMPLETE OPERATOR'S MANUAL.

If you need clarification or any additional information call your Star dealer or call Star Industries @ 1-800-541-1797 during normal business hours.

Customers Who Bought this product also bought



Lift Hooks -
Lift up to 22,000 lbs
Safely and securely



Safety Work Platforms -
Turn your forklift into an
Aerial work platform



Concrete Hoppers -
Turns Your forklift into
A concrete placer.

Visit www.starindustries.com or call us at 800-541-1797 for more information on these and other great products.

Before Use:

1. Make sure the operator is well qualified to operate the specific forklift model to be used, has read and understands this manual and has reviewed the forklift operator's manual for any additional requirements, limitations, restrictions, or additional safety procedures prescribed by the forklift manufacturer when using this type of attachment. The forklift/crane operator must also be properly certified under OSHA requirements to operate the forklift/crane to be used.
2. Inspect the bucket to make sure it is in good condition. There must not be any broken welds, nor any deformation of the steel or other component, nor any cracks in the steel.
3. Check to make sure the fork retaining pins have hair pins to secure them in place and safety chains are properly secured to anchor blocks and grab hooks are properly secured.
4. Grab Hook on safety chain must be locking type. If a replacement is required, contact your Star dealer or Star Industries directly.
5. Decals showing "Empty Weight", "Read Before Using" and "Rated Lift Capacity" are required. Check that all decals are in place and legible. Replacement decals are available from a Star dealer.
6. Make sure personnel involved understand any hand signals that will be required and all involved personnel understand what will be required of them.
7. Make sure the travel path is clear of obstructions and that adequate clearance will be maintained from all power lines.

Caution:

1. Risks are high for serious injury when working around suspended loads. The operator must avoid carrying the load over people and it is best to have a 10' foot rule. This requires that no one is allowed to be within 10 feet of the area in which the load would fall if a failure occurred.
2. Do not allow anyone to ride on/in the bucket.
3. Do not make any repairs or modifications to the bucket without written authorization from the manufacturer. Replacement of hooks, locking pins, decals and hair-pins do not require authorization.

WARRANTY PROCEDURE:

Upon notification, Star Industries will advise if the product will need to be returned to Star Industries for inspection and/or repair, or If the Star Dealer, or other entity, can be authorized to make the inspection/repair at their location, or if circumstances dictate other solutions. Dealer or other entity repairs must have prior written authorization. A "cost of repair" estimate will be required prior to authorization. Reimbursement will be at the current "Star Warranty Labor Rate" and will not include reimbursement for off-site travel. A Warranty Claim Form must be submitted within 45 days of warranty repair authorization to receive credit for repair. A return authorization number must be obtained from Star Industries before a product can be returned for inspection and/or warranty and that number must appear on the return shipping label. Upon inspection, Star Industries will determine if the product is defective and if so, whether it will be repaired or replaced. Repair or replacement is at the discretion of Star Industries. Transportation charges to Star Industries are not covered under the warranty and must be prepaid by dealer or customer unless it is within the first two years of warranty. In which case, if evidence acceptable to Star Industries, is provided that the product is defective and the return is from within the continental United States or Canada, Star will arrange for return shipment at Star Industries expense. Products found to be defective within the initial two year period and returned to Star Industries for repair or replacement will be returned to the dealer or customer freight prepaid providing it is within the continental United States or Canada. Warranted products to be shipped outside the United States or Canada and those warranted after the initial 2 years will be shipped freight collect. Unwarrantable products will be returned freight collect at the request of the dealer or customer, otherwise they will be destroyed.

LIMITATION OF DAMAGES:

Star's obligation under this warranty shall not include costs of installation, duty, taxes or any other charges whatsoever or any liability for direct, indirect, incidental or consequential damages or delay. Star's liability for any and all losses and damage to purchaser resulting from any cause whatsoever, including negligence or breach of form of warranty, express or implied by Star, alleged damage for defective goods, irrespective of whether such defects are discoverable or latent, shall in no event exceed the purchase price of the particular goods. Products repaired or replaced under this warranty are warranted only for the remainder of the original warranty. Any improper use including operation after discovery of defective or worn parts not approved by Star or any alteration or repair by others in such manner as in Star's judgment affects the product materially and adversely shall void this warranty.

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES (WHETHER WRITTEN, ORAL OR IMPLIED) INCLUDING WARRANTIES OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

STAR INDUSTRIES LIMITED WARRANTY

Star Products are warranted to the original purchaser against defective workmanship and/or materials (when properly installed, used, and maintained) for a period as specified below from date of delivery to the customer by an authorized Star Dealer or direct from Star Industries. This warranty does not cover misuse, abuse, normal wear and tear, or accidental damage.

5 year Warranty:	All Star products except as noted below. (Includes HD Auger Drives & most non-hydraulic products)
2 year Warranty:	Medium Duty Auger Drives
1 year Warranty:	Auger Bits and Auger Accessories (excludes auger drives), Crane Forks, Grapples, Angle Broom, Self Dumping Hoppers, Replacement Forks, and Over the Bucket Forks
6 month Warranty:	Concrete Mixers

WARRANTY CLAIM NOTIFICATION:

Product defects should be reported to the Star dealer from whom the product was purchased or to Star Industries in writing promptly after discovery. Preferably photographs showing the defect should also be provided along with a written report of circumstances involved. Warranty claims not made within 30 days after discovery of the defect shall be null and void.

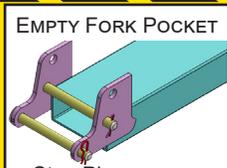
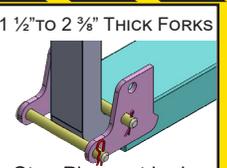
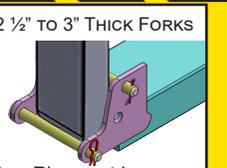
WARRANTY DETERMINATION:

If a warranty claim is found worthy and made within the warranty period we reserve the right at our discretion to repair existing defects or to replace it with the same or current model free of charge or to issue a credit for the reasonable cost of repair or take possession of the equipment and issue reimbursement for the calculated value.

Installation:

On the forks installation: Insert the forks into the fork pockets and then slide the bucket all the way onto the forks so the pin plates extend behind the back of the fork. Insert the fork locking pins in each side and secure them with hair-pins to lock the bucket to the forks. Then secure the safety chains to a strong part of the forklift carriage making sure the chains are not slack and installed as close to a straight horizontal pull as possible. The chain angle must not exceed 45 degrees vertical.

DANGER - DO NOT USE WITHOUT INSTALLING RETAINING PINS behind the heel of each fork and securing with hair pins or cotter pins

 <p style="font-size: small; text-align: center;">EMPTY FORK POCKET</p> <p style="font-size: x-small; text-align: center;">Stop Pin on some attachments are not removable</p>	 <p style="font-size: small; text-align: center;">1 1/2" TO 2 3/8" THICK FORKS</p> <p style="font-size: x-small; text-align: center;">Stop Pin must be in lower hole when using 1 1/2" TO 2 3/8" thick forks</p>	 <p style="font-size: small; text-align: center;">2 1/2" TO 3" THICK FORKS</p> <p style="font-size: x-small; text-align: center;">Stop Pin must be upper holes when using 2 1/2" to 3" thick forks</p>
---	---	---

Safety chain(s) must also be used. Wrap chain around a strong part of the fork carriage and secure with locking grab hook.

Use:

When using the bucket, care must be taken not to exceed the lift capacity of the telehandler. Be sure to include the weight of the bucket in with the weight of the load then refer to the forklift's load chart for maximum load capacities at various boom positions.

The bucket is designed for loading loose material and is not intended for digging. It is ideal for trash clean up and backfill operations. It is not designed and must not be used to transport personnel.

The load capacity of the bucket is only limited to the load capacity of the telehandler.

The empty weight of the bucket is on the product label attached to the bucket, however, should the product labels be missing the empty weights are shown below and on the front of this manual.

Model List			
Model	Size	Capacity	Empty Weight
1400B	60"	1.0 cuyd.	600 lbs.
1406B	72"	1.2 cuyd.	670 lbs.
1408B	95"	1.6 cuyd.	760 lbs.
1408BHC	95"	2.0 cuyd.	900 lbs.

Reach Up or Out



Universal Fit



If you need clarification or any additional information call your Star dealer or call Star Industries @ 1-800-541-1797 during normal business hours.

Ask about the other bucket and hopper options star has available.

Clean Up Debris

